


DRYWALL FRAME INSTALLATION


1.

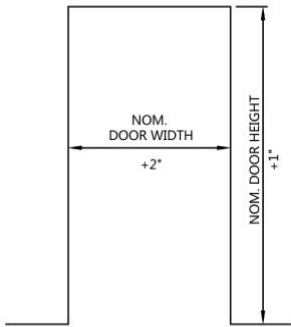

Prepare rough opening
Door nominal width +2"
Door nominal height +1"


(i.e., 3070=38" width, 85" height.)

2.

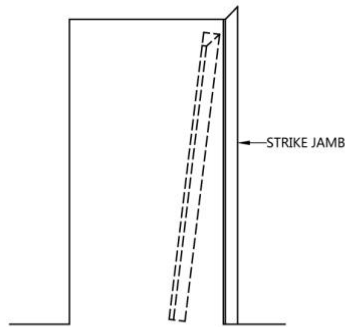


Install strike jamb by sliding over wall at top and engaging corner reinforcing into header. Pivot jamb into place.

3.

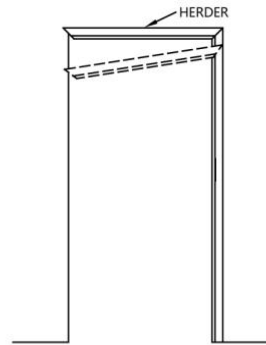


Install header into position approximately 1" from top and in the center of rough opening.

4.

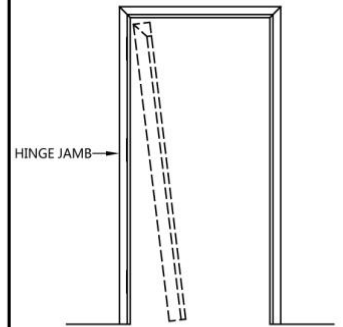


Repeat Step #2 with hinge jamb.

5.

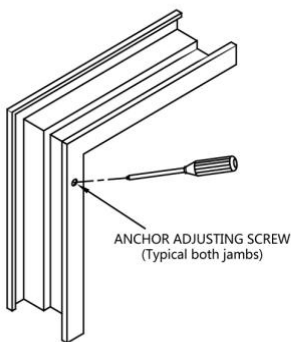


Turn adjusting screws in both jambs clockwise until anchor is resting against the wall.

6.

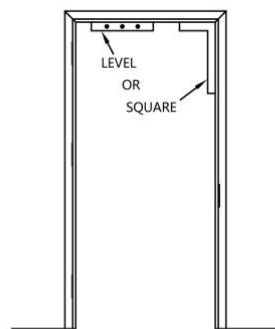


If feasible, hang door now and adjust frame on wall to allow proper door/frame clearance or plumb frame with carpenter square and/or level. (adjust header levelness by shimming under jambs.)

7.

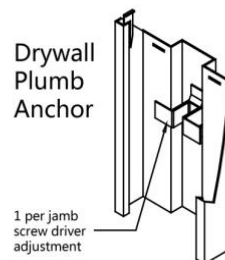

1 per jamb screw driver adjustment

8.

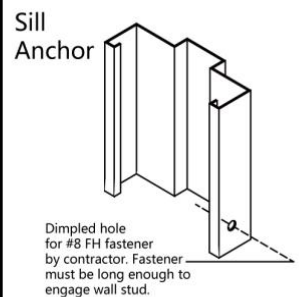

Check door opening dimension at base of frame (same dimension as between jambs at header.) Secure jambs with drywall screw (not furnished) through sill anchor at base of frame. Be sure to attach through both sill anchors on each side of jambs(4 places.)